


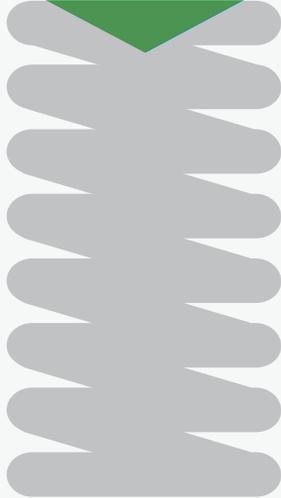

HOW TO

REPLACE

REAR
COIL
SPRINGS



1
2
3
4
5
6
7

1 Raise the rear of the cart and place jack stands under the frame. Place a car jack under the rear end housing of the cart.

2 Remove the rear shocks from cart and retain hardware.

3 Compress the spring with a screwdriver and remove the top spring retainer with pliers. Slide off old spring.

4 Make sure that the shock is fully extended. Slide the new HD Spring onto shock, and replace stock retainer on top of the spring.

5 Push the spring tight against retainer, and place the two-piece collar (included in kit) in the remaining space between the spring and the bottom of shock. Tighten hardware using Allen wrench.

6 Repeat steps 3-5 for second shock.

7 Reinstall shocks on back of cart.

