

# E-Z-GO RXV WINCH MOUNT BUMPER

## Installation Instructions

Part# 7455



### Hardware Kit

3/8 x 1 Bolts-2

3/8 x 2 1/2 Bolts-2

3/8 Washers-8


3/8 Locknuts-4



*Always wear appropriate eye protection!*

### Installation Instructions:

1. Remove the stock front bumper from the car.
2. Using the supplied 3/8 x 2 1/2 bolts, washers and locknuts mount the winch mount brackets to the stock holes in the front frame in front of the a-arm mount as shown in FIGURE 1.
3. Using the supplied 3/8 x 1 bolts, washers and locknuts bolt the top mounts of the winch bumper to the frame uprights as shown in FIGURE 1.
4. This bumper has 2 pre-drilled holes which match up with most 2000lb winches. If your winch does not line up with the 2 pre-drilled holes use your winch as a guide and mark and drill through the mounting plate new holes for mounting your winch.
5. Securely tighten all bolts.
6. The winch mount has a light mount tab on the bottom of the winch mount which will allow you to install off-road lights.

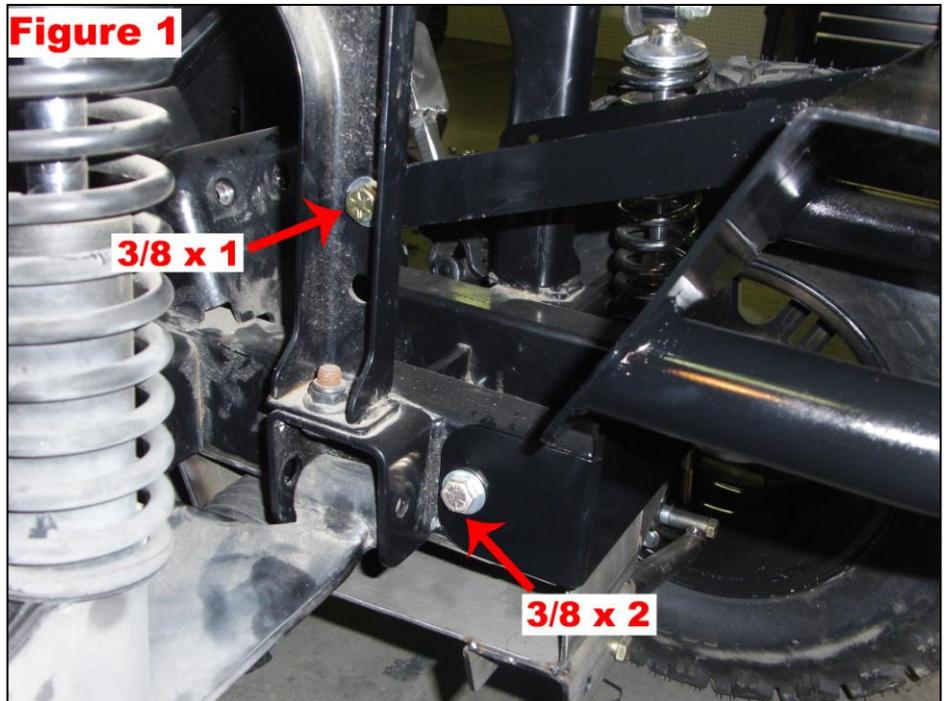

866-405-2537

[www.jakesliftkits.com](http://www.jakesliftkits.com)