

# MADJAX

## Part # 01-044/50 Genesis 250/300 Rear Seat

(will fit E-X-GO® RXV®)



### ITEMS INCLUDED

- Hardware Packs 1-8
- Grab Bar
- Armrests
- Footrest
- Main Frame
- Main Brackets
- Bagwell Brackets
- Main Bracket Support
- Bagwell Support Bracket

### TOOLS NEEDED

- Drill
- 17mm Socket
- 17mm Wrench
- 14mm Socket
- 10mm Socket
- #3 Phillips Bit
- 13mm Wrench

Only needed  
for premium seats



Lean Back  
Brackets  
(Sold with 250/300  
Cushions)

Main Bracket Support



Grab Bar



Bagwell  
Brackets

Main  
Brackets



Armrests

Footrest



Main Frame



Bagwell Support Bracket

## WARNING:

Madjax recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your cart's body.


### STEP 1

Remove factory canopy, rear struts, seat back and motor cover. Retain hardware.




### STEP 2

Attach main brackets as shown on both sides using hardware retained from Step 1.

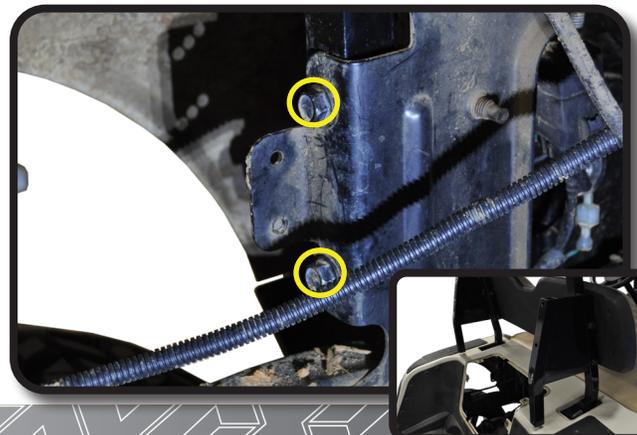


## STEP 3

Attach factory struts to seat bracket as shown using hardware retained from Step 1.

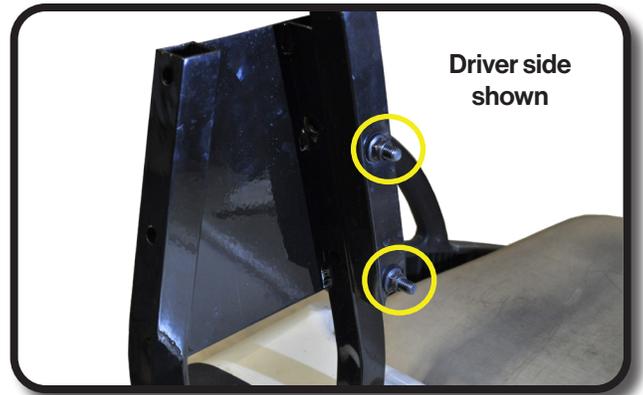

## STEP 4

Attach seat back to rear struts using hardware retained from Step 1.

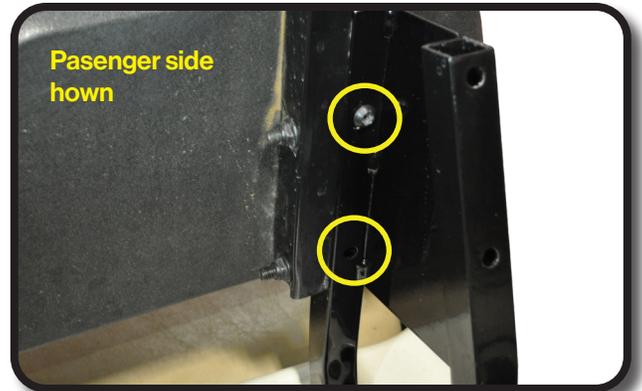


## STEP 5

Attach support bracket to main seat bracket as shown using hardware from Pack 1.



## STEP 6

Attach main polyboard to support bracket using hardware from Pack 2.

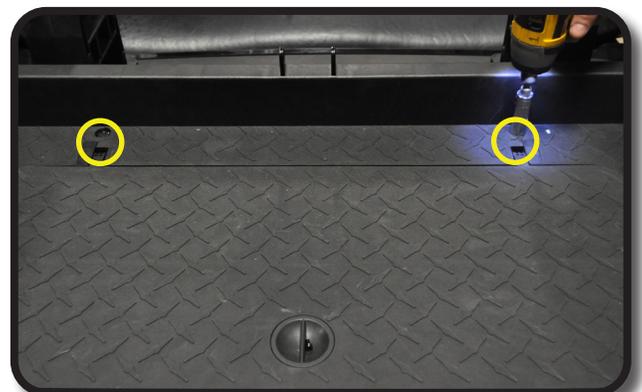


## STEP 7

Attach main polyboard frame to bagwell bracket using hardware in Pack 2.



## STEP 8

If using 250/300 seat cushion attach lean back bracket that was packaged with the cushions. Using the appropriate labeled hole for your cart attach lean back bracket to main seat bracket using hardware from Pack 3.

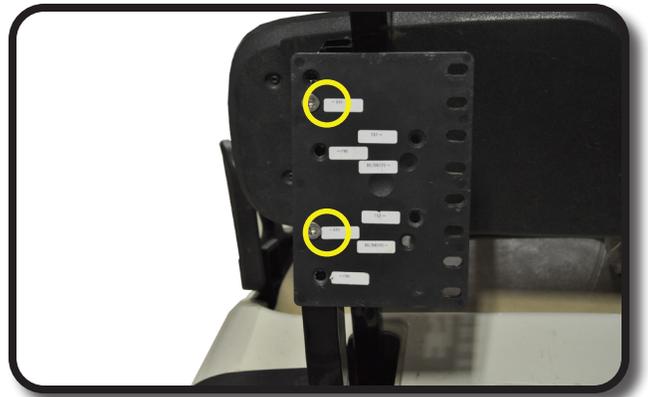


## STEP 9

Choose desired height and attach lean back cushion to bracket using hardware from Pack 4.



## STEP 10

Use countersunk #3 Phillip bolt to attach bagwell bracket to support bracket and tighten using hardware from Pack 5. \*Must be done before next step.

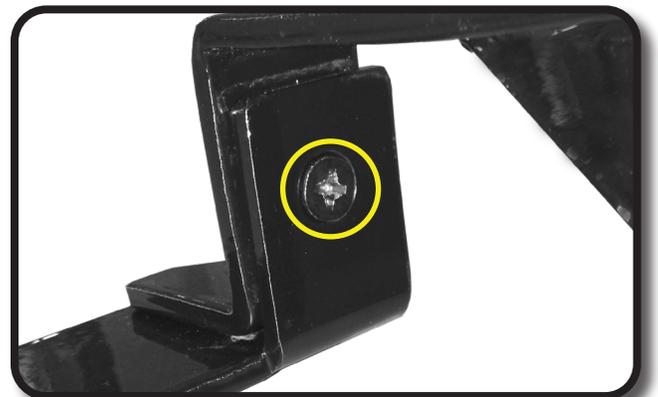

## STEP 11

Attach bagwell bracket to cart and support bracket using hardware from Pack 5. For middle hole in support bracket use 8mm hardware, the 2" washer goes underneath the cart.




## STEP 12

Attach armrest to poly seat frame as shown using hardware from Pack 6.




## STEP 13

Attach footrest to bracket as shown using hardware from Pack 7.

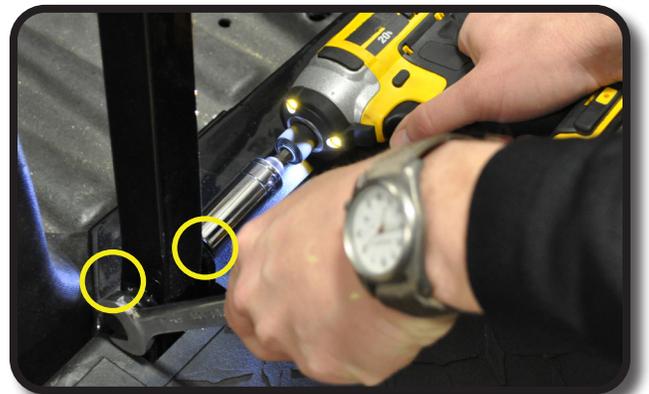

## STEP 14

Attach grab bar to footrest as shown using hardware from Pack 7.

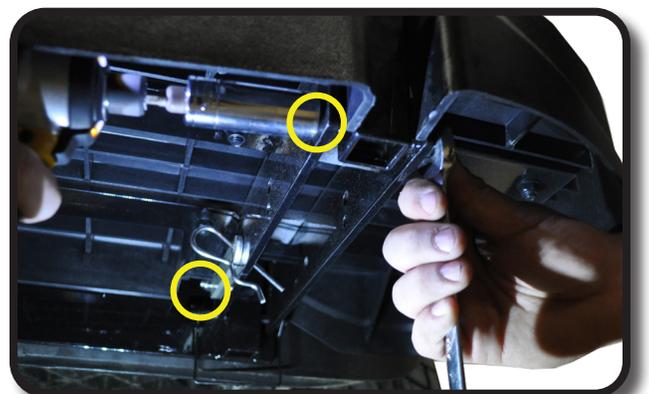

## STEP 15

Using quick release pins from hardware pack secure footrest to bagwell bracket as shown.



## STEP 16

Attach seat bottom cushion as shown using hardware from Pack 8.




## STEP 17

Reattach roof using hardware retained from Step 1.



## STEP 18

Footplate can be folded up by removing the four c-clips and folding forward. To lock footplate in up right position use brackets as shown.

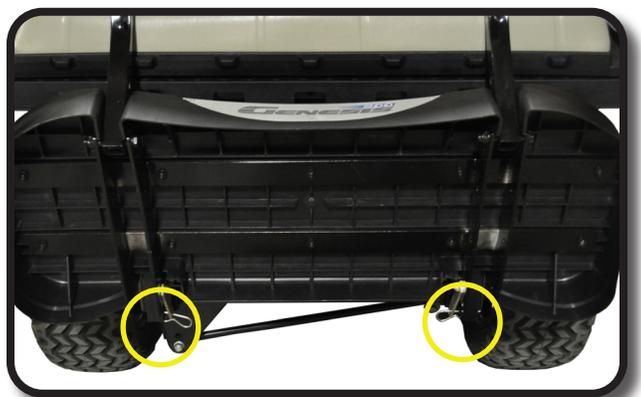

# HARDWARE PACK

## Pack 1

- 2 – 10x50mm hex bolt
- 4 – 10x20mm flat washer
- 2 – 10mm lock nut
- 4 – Rubber Washers

## Pack 2

- 2 – 8x60mm hex bolt
- 4 – 8x15mm flat washer
- 2 – 8mm lock nut
- 6 – Rubber Washers
- 2 – 10x50mm Hex bolt
- 4 – 10x20mm flat washer
- 2 – 10mm locknut

## Pack 3

- 4 – 8x50mm countersunk #3 Phillips
- 4 – 8x15mm flat washer
- 4 – 8mm locknut

## Pack 4

- 4 – 6x25mm hex bolt
- 4 – 6x15mm flat washer
- 4 – 6mm lock washer

## Pack 5

- 2 – 6x50mm hex bolt
- 4 – 6x15mm flat washer
- 2 – 6mm locknut
- 8 – Rubber Washers
- 1 – 10x85mm Hex bolt
- 2 – 10x20mm flat washers
- 1 – 10mm lock nut
- 1 – 2"x2" square washer
- 2 – 8x25mm countersunk #3 Phillips
- 2 – 8x20mm flat washers
- 2 – 8mm locknut

## Pack 6

- 4 – 8x30mm hex bolt
- 4 – 8x15mm flat washer

## Pack 7

- 4 – 10x75mm hex bolt
- 8 – 10x20mm flat washer
- 4 – 10mm Locknut
- 4 – Quick release pins (easy remove hardware for folding in the foot plate)
- 8 – Rubber Washers

