




ULTIMATE UPGRADE

INSTALLATION INSTRUCTIONS

WILL FIT CC PREC, CC DS, TXT, T48, RXV, & DRIVE MODELS

INCLUDED:

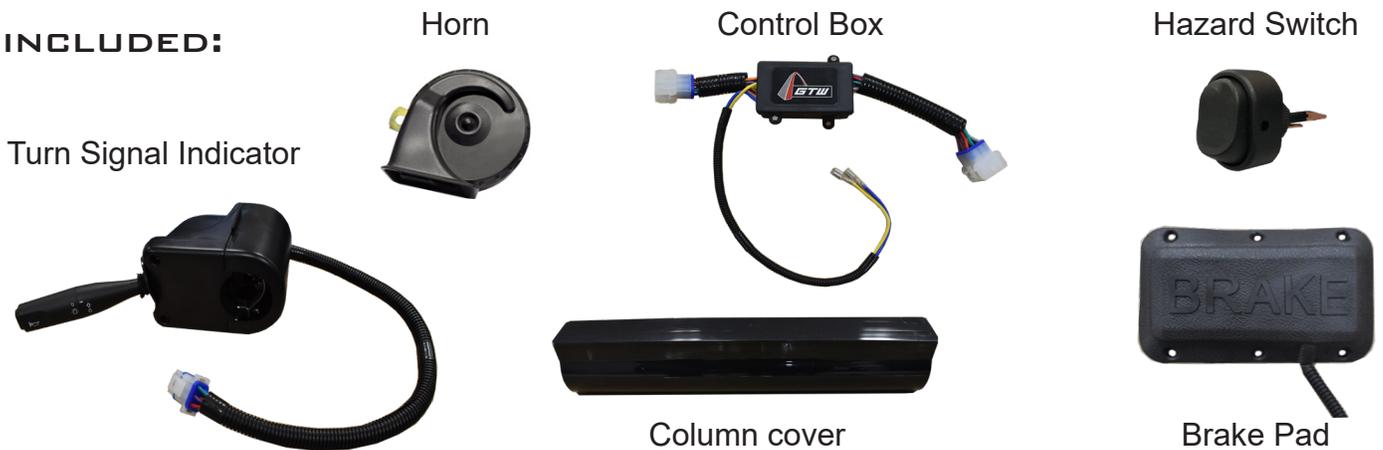

WARNING:

This Upgrade Kit is only compatible with GTW Light Kits. Any modifications to this kit will void the warranty. Installer is responsible for any damages as a result of modifications.

 Tools Required: #2 Phillips Tip

Mount the **Turn Signal Indicator** assembly using clamps provided and tighten. Then attach indicator cover over clamps and snap in place to secure.

Run indicator harness along steering column.



Attach **Column Cover** to steering column, secure harness in column cover chase.

2



 Rotary Cutting Tool or 1-1/2" Whole Saw

Run indicator harness under or into dash as shown.

*Some models may require cutting of dash where column meets front instrument panel to feed harness inside dash board.

3



Connect 9 pin from **Control Box** harness to 9 pin connector of **GTW Upgrade Harness** from GTW light kit.

4



Connect 6 pin from the **Control Box** to 6 pin connector of **Turn Signal Indicator** harness. The Control box replaces the 12V flasher and relays and also incorporates a 30 second blinker cut off.

5



Note: Control Box does NOT return Turn Signal Arm to center position.

 15/32" Drill Bit

To install the **Hazard Switch**, find the desired location on your dashboard or use the old light switch hole.


**Before drilling check behind dash to ensure nothing can be damaged.*

Drill out the switch hole if needed, remove ring nut from back of switch, and insert switch into dash.




Attach Blue and Yellow wires from Control Box Harness to **Hazard Switch** as shown. There is no wire orientation required, wires can attach to either post.

Re-attach dashboard using factory hardware.

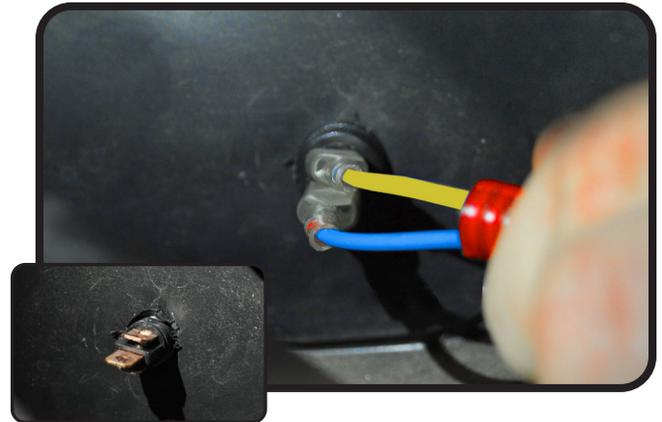


Attach **Horn** to purple and black female spade connectors from your light kit Upgrade Harness and secure horn under front cowl.

**There is no wire orientation.*

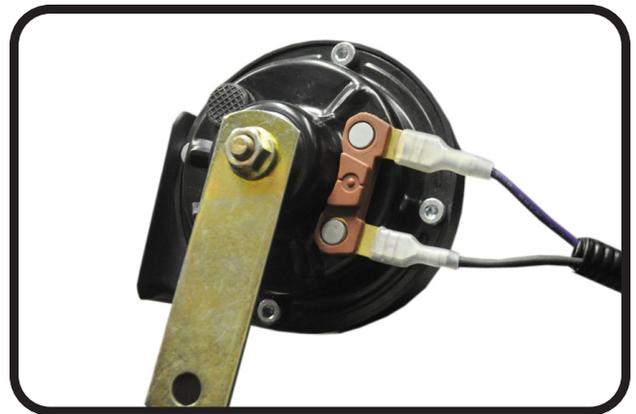

For the **Brake Pad**, plug the male and female bullet connectors together from GTW Upgrade Harness and **Brake Pad** as shown.

**Some cart models attach in brake access panel, others attach under cart.*

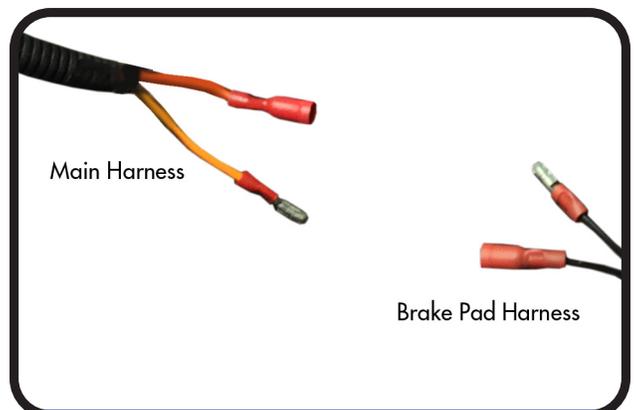

 #2 Phillips Tip

PRECEDENT & DS

Attach brake pad using hardware provided as shown. Secure brake pad wires to pedal using zip ties provided.




TXT

Attach brake pad using hardware provided as shown. Secure brake pad wires to pedal using zip ties provided.



RXV

Attach brake pad using hardware provided as shown. Secure brake pad wires to pedal using zip ties provided.

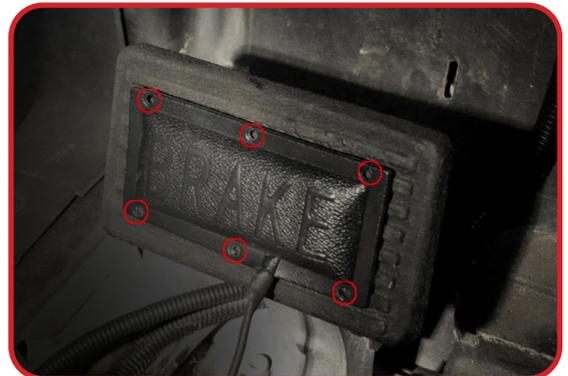

DRIVE

Attach brake pad using hardware provided as shown. Secure brake pad wires to pedal using zip ties provided.

