



GTW BRAKE LIGHT KIT for Upgrade Harness

INSTALLATION INSTRUCTIONS

WILL FIT CC PREC, CC DS, TXT, T48, RXV, & DRIVE MODELS

TOOLS NEEDED:


#2 Phillips Tip
Cordless Drill
3/32" Drill bit (for Yamaha
carts only)

KIT INCLUDES:



Brake Pad

Mounting Screws

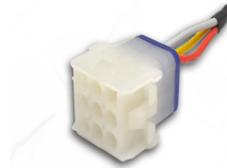


Jumper Harness

WARNING:

This Brake Pad Kit is only compatible with the GTW Upgrade Harness. Any modifications to this kit will void the warranty. Installer is responsible for any damages as a result of modifications.

Plug the Male & Female bullet connectors from the **Brake Pad** into the matching bullet connectors from the GTW Upgrade Harness.

**The Black female spade connector is not used.*

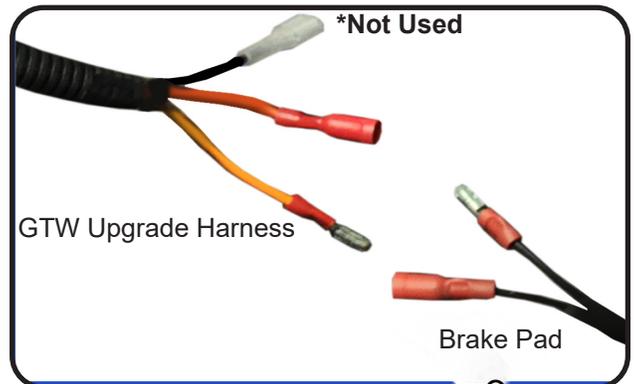

Plug in the **9 Pin Jumper Harness** into the 9 Pin connector from your GTW Upgrade Harness as shown.

The 9 Pin connector on your GTW harness is located behind your Instrument Panel near the light switch.






Club Car Precedent & DS

Attach **Brake Pad** to Brake Pedal using hardware provided as shown. Secure Brake Pad harness to the Pedal arm using Zip Ties.




E-Z-GO TXT

Attach **Brake Pad** to Brake Pedal using hardware provided as shown. Secure Brake Pad harness to the Pedal arm using Zip Ties.

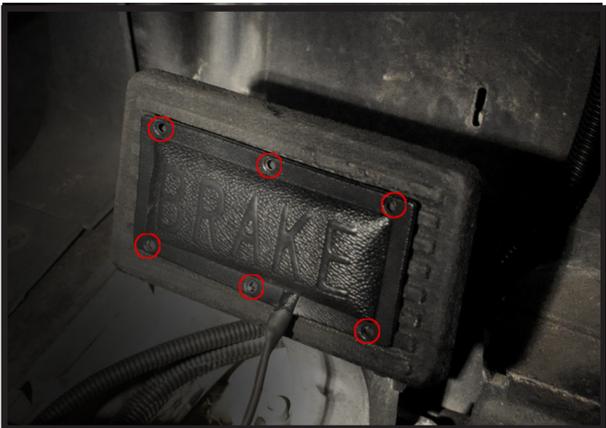

E-Z-GO RXV

Attach **Brake Pad** to Brake Pedal using hardware provided as shown. Secure Brake Pad harness to the Pedal arm using Zip Ties.

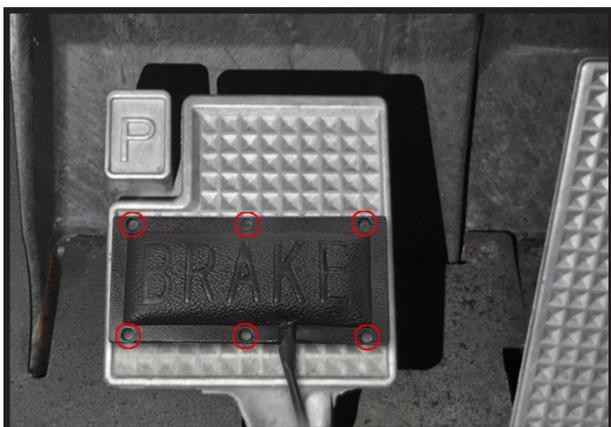

Yamaha Drive, Drive2, & G Series

Attach **Brake Pad** to Brake Pedal using hardware provided as shown. Secure Brake Pad harness to the Pedal arm using Zip Ties.

Note: A 3/32" drill bit is required for easier installation of mounting screws into the metal Brake Pedal.