

MADJAX

Part # 03-004

Roof Rack

(will fit E-Z-GO® TXT®)



ITEMS INCLUDED

- Front Brackets
- Rear Brackets
- Roof Rack
- Hardware Pack

TOOLS NEEDED

- 13mm Wrench
- 13mm Socket
- Cordless Drill

*Brackets Sold Separately



Front Brackets



Rear Bracket



Roof Rack

WARNING:

Madjax recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your cart's body.


STEP 1

Remove factory hardware from struts. Leave top in place. Do not retain hardware.



STEP 2

Attach rear bracket to roof rack using (2) 8mmx40mm bolts as shown. Tighten hardware.

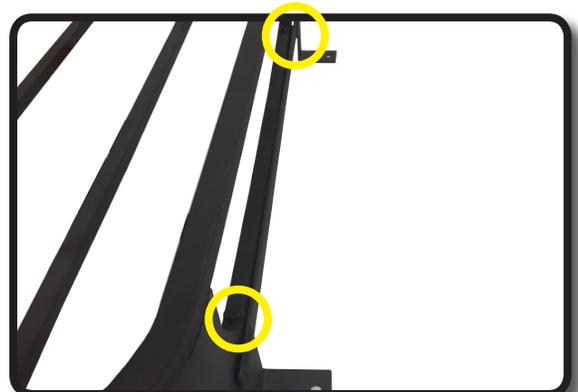

STEP 3

Attach front brackets to roof rack using 8mmx40mm bolts. Do NOT completely tighten hardware until Step 6.




STEP 4

Now using the 8mm x 65mm bolts attach the rear bracket to the canopy and rear strut using mounting locations as shown. Do NOT completely tighten hardware until Step 6.



STEP 5

Attach front brackets to canopy and struts using factory mounting locations with supplied 8mm x 65mm hex bolts.

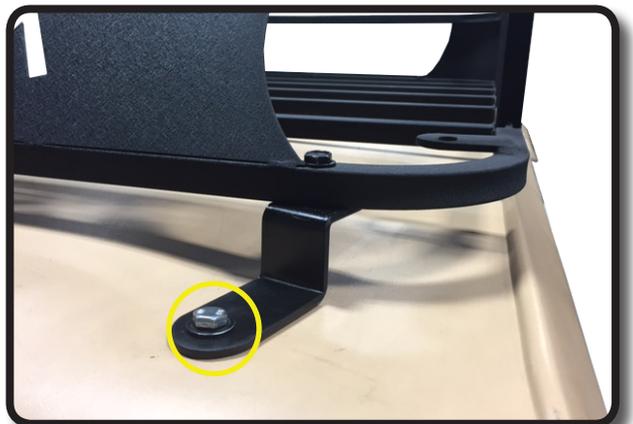

STEP 6


Now that all brackets are attached to canopy you can fully tighten all hardware.



HARDWARE PACK

(Dacromet Coated)

- 4- 8mm x 40mm Hex Head Bolts
- 4- 8mm x 65mm Hex Head Bolts
- 16- 8mm flat washers
- 8- 8mm lock nuts

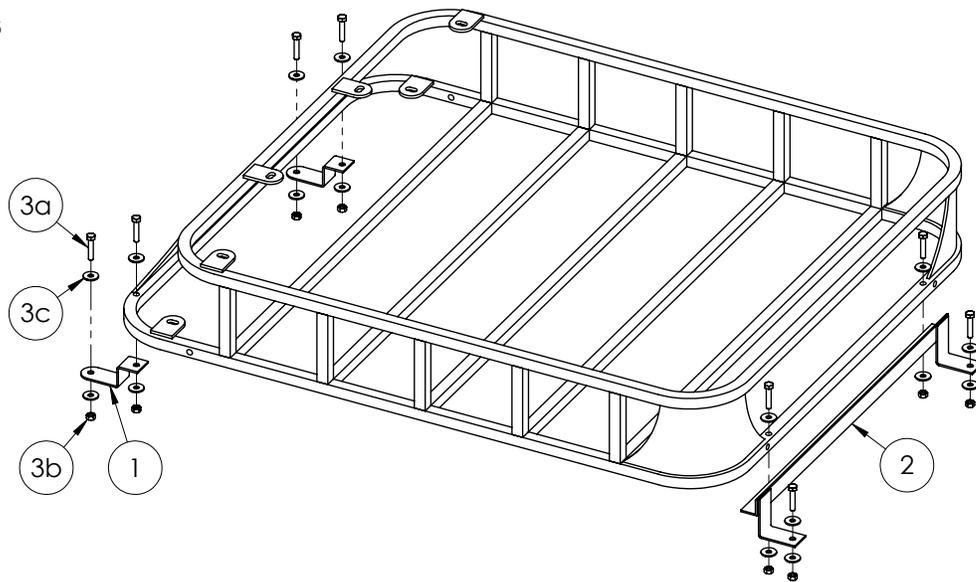

INSTALLATION COMPLETE

Club Car®, Club Car® Precedent®, and Club Car® DS® are registered trademarks of Ingersoll Rand, Inc. (“Ingersoll Rand”). Reference to Club Car®, Club Car® Precedent®, or Club Car® DS® or any of Ingersoll Rand’s trademarks, word marks, or products is only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected to, affiliated with, sponsored by, or endorsed by Ingersoll Rand or any of its subsidiary companies.