

MADJAX

Part # 03-005

Roof Rack

(will fit E-X-GO® RXV®)



ITEMS INCLUDED

- Front brackets
- Rear bracket
- Roof Rack
- Hardware Pack

TOOLS NEEDED

- Cordless Drill
- 13mm Socket
- 13mm Wrench
- 15mm Socket
- 15mm Wrench
- 17mm Socket
- 17mm Wrench



Front brackets



Rear bracket



Roof Rack


WARNING:

Madjax recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your cart's body.

STEP 1


A) Remove front canopy bolts. DO NOT retain.

B) On rear struts remove the bolts closest to the rear of the cart as shown. DO NOT retain.

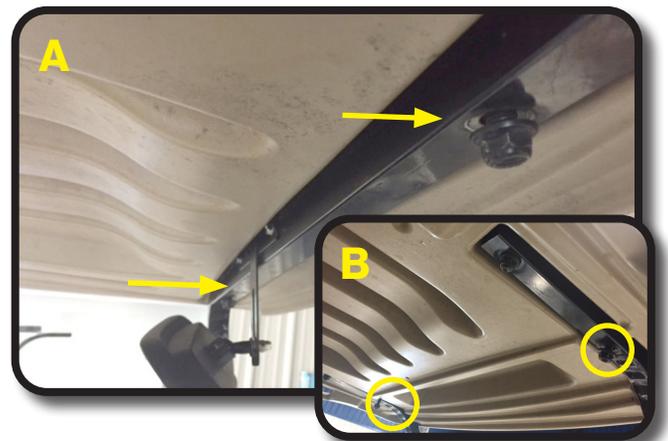

STEP 2


Attach rear bracket to top hole's of Roof Rack using 8mm x 35mm bolts as shown.

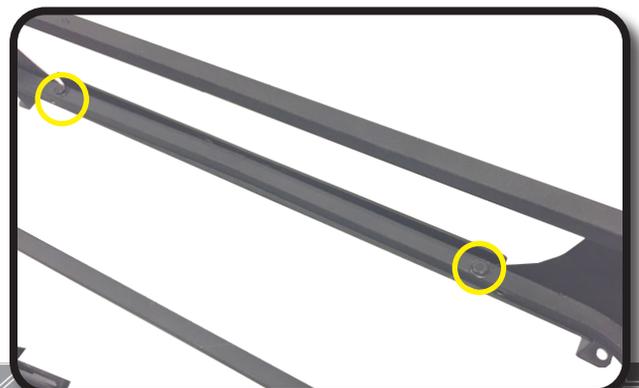

STEP 3

Attach front brackets to front of roof rack at holes nearest MJFX plate using two 8mm x 35mm bolts as shown.

DO NOT tighten yet.

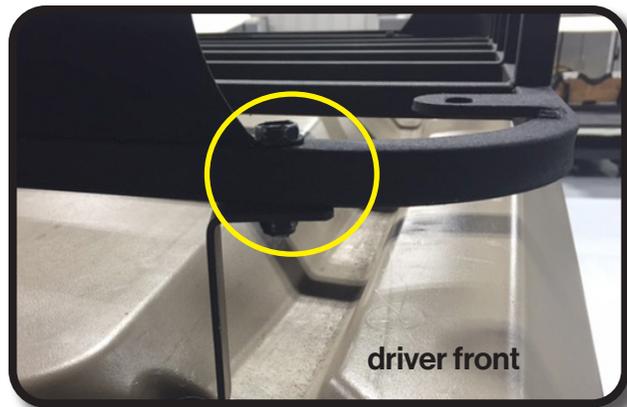

STEP 4


Using 10mm x 55mm bolts attach rear bracket to rear struts through canopy as shown.

DO NOT tighten yet.



STEP 5

Attach front brackets to front struts through canopy as shown using 10mm x 55mm bolts and tighten. You can now tighten all other hardware from earlier steps.

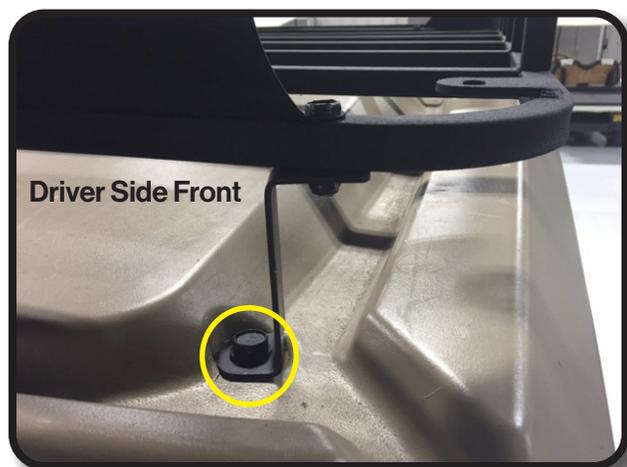

INSTALLATION COMPLETE

E-Z-GO®, TXT®, and RXV® are registered trademarks of Textron Innovations, Inc. ("Textron"). Reference to Textron's trademarks and products is only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected or affiliated with or sponsored by Textron® or E-Z-GO®.

HARDWARE PACK

(Dacromet Coated)

- 4 - 8mm x 35mm Hex head bolts
- 4 - 10mm x 55mm Hex head bolts
- 8 - 8mm Flat washer
- 4 - 8mm Nylock nuts
- 8 - 10mm Flat washers
- 4 - 10mm Nylock nuts

