



03-100
FENDER FLARES
will fit CLUB CAR® PRECEDENT®
Installation Instructions

INCLUDED:




Fender Flares



20 Push Rivets

We recommend professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your car's body.

Test fit fender flare to bodywork to determine best placement. Holding the fender flare in place, mark locations to be drilled.

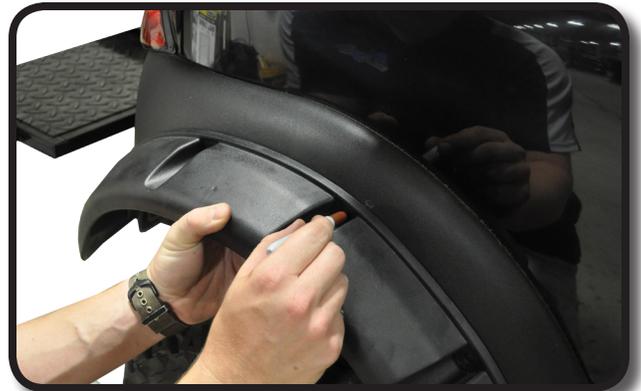

Drill first hole using a 9/32" drill bit. Ensure area behind body work is clear to avoid potential damage to wiring or other bodywork.



3
Insert barbed push rivet half-way to secure fender flare. Check other marked holes to ensure proper placement before drilling. Once sure of placement, rotate fender flare out of the way and drill other holes.



4
Push the first rivet in to secure fender flare and then insert other rivets.

Repeat Steps 1-4 for other three fender flares.



INSTALLATION COMPLETE

