



03-102
FENDER FLARES
will fit E-Z-GO® TXT®
Installation Instructions

INCLUDED:



Fender Flares



20 Push Rivets

We recommend professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your car's body.

1
Test fit fender flare to bodywork to determine best placement. Holding the fender flare in place, mark locations to be drilled.




2
Drill first hole using a 9/32" drill bit. Ensure area behind body work is clear to avoid potential damage to wiring or other bodywork.



3

Insert barbed push rivet half-way to secure fender flare. Check other marked holes to ensure proper placement before drilling. Once sure of placement, rotate fender flare out of the way and drill other holes.

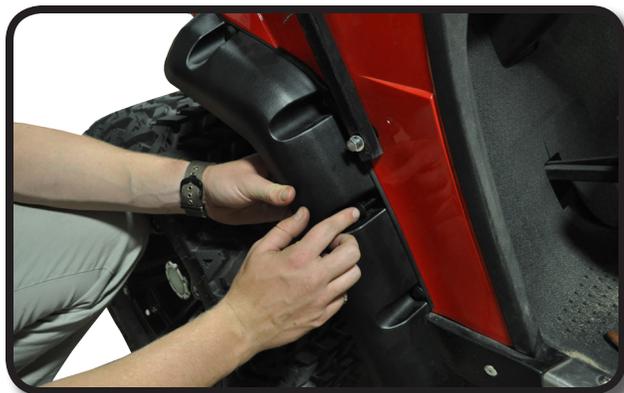

4

Push the first rivet in to secure fender flare and then insert other rivets.

Repeat Steps 1-4 for other three fender flares.



INSTALLATION COMPLETE

