



09-006

WINDSHIELD

WILL FIT STAR CART CLASSIC®
INSTALLATION INSTRUCTIONS



INCLUDED:
WINDSHIELD
2 STRUT BRACKETS
HARDWARE



Windshield



2 Strut Brackets




Hardware

Madjax recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your cart's body.

1



Remove all 4 sides of protective plastic from windshield and attach strut brackets to the lower portion of the windshield as shown.

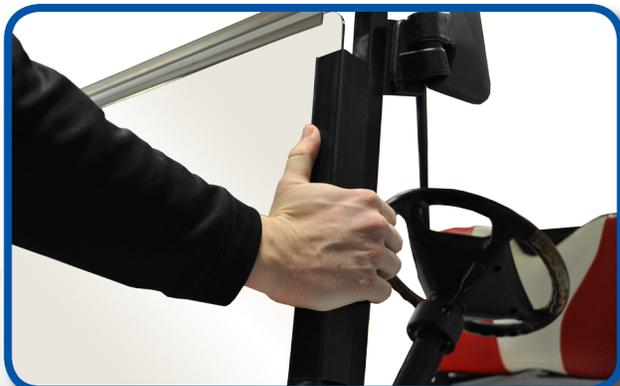

2

Attach windshield to cart by snapping strut brackets to front struts.

3
Insert rubber bushing in the windshield and secure with hardware provided.

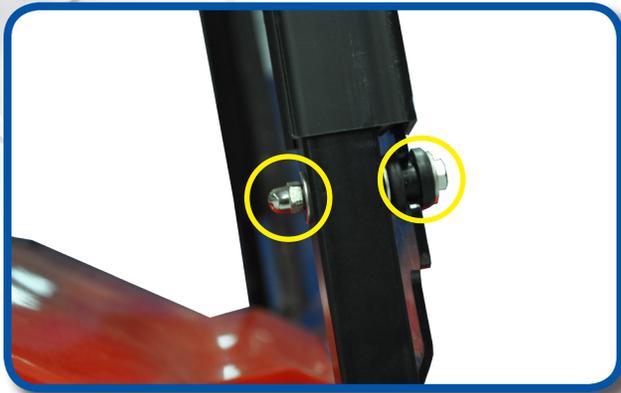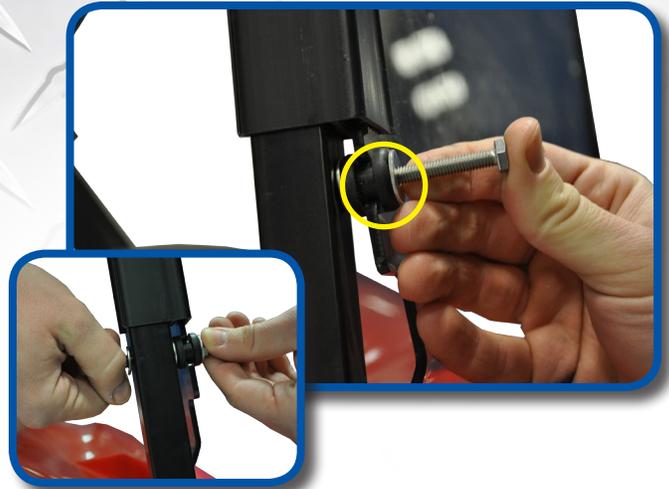

4
Tighten windshield. Be careful not to overtighten and break windshield.

Warranty Part #'s
2 - Strut Brackets - W09-6-10
Hardware Pack - W09-6-11



INSTALLATION COMPLETE

VISIT WWW.MYMADJAX.COM FOR MORE INSTALLATION VIDEOS

E-Z-GO®, E-Z-Go® TXT®, and E-Z-Go® RXV® are registered trademarks of Textron Innovations, Inc. ("Textron"). Reference to E-Z-Go®, TXT®, or RXV® or any of Textron's trademarks, word marks, or products is only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected to, affiliated with, sponsored by, or endorsed by Textron or any of its subsidiary companies.