

MADJAX

Part # 14-032
BRUSHGUARD
Will fit Club Car® Tempo®



* Front Hitch Not Included

INSTALLATION INSTRUCTIONS

TOOLS NEEDED

10mm Wrench
13mm Wrench
13mm Socket
17mm Wrench
6mm Allen Wrench

ITEMS INCLUDED



Brushguard



Brushguard Mounting Bracket



Hardware Pack

We recommend professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product.


STEP 1

Switch key to OFF position, and set the Parking Brake




STEP 2

Remove the OEM **Bumper Bolts** from the bumper with a 13mm socket and 10mm wrench. Then, using a 13mm Socket remove the front two **Plate Bolts** from the front plate as shown. Retain hardware.

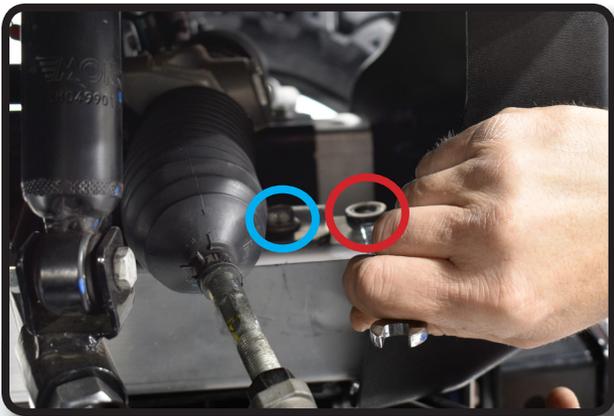


STEP 3

Using retained hardware, install Brushguard Mounting Bracket to the frame as shown. Once all four bolts are in place, tighten hardware.

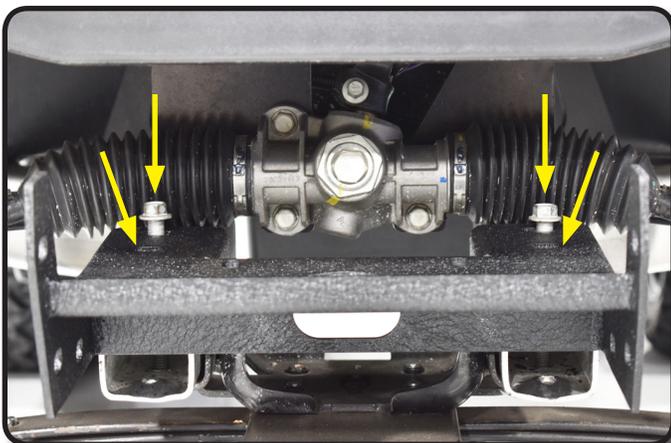

STEP 4 Using supplied bolts, washers, lock washers, and nuts, attach the Brushguard to the Mounting Bracket as shown.

Once all six bolts are in place, tighten using a 6mm Allen wrench and 17mm wrench. Check Brushguard for proper alignment, holes are slotted for adjustments if needed.

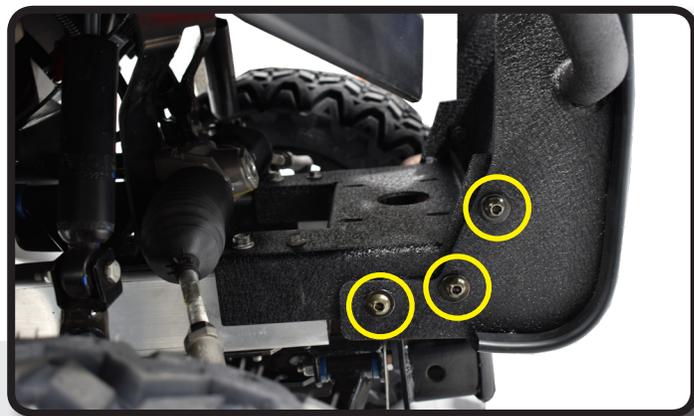

INSTALLATION COMPLETE

MADJAX

Club Car®, Precedent®, DS®, and Tempo®, are registered trademarks of Ingersoll Rand, Inc. Reference to Ingersoll Rand's trademarks and products is solely for the purpose of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected, affiliated with, or sponsored by Ingersoll Rand® or Club Car®.