

NIVEL

Your Complete Source


FNR Switch Assembly

For E-Z-GO TXT Electric 94-Up

Part # 5070

TOOLS NEEDED

- 1/2" Socket
- 3/8" Socket
- 3/8" Wrench
- 9/16" Socket
- 9/16" Wrench

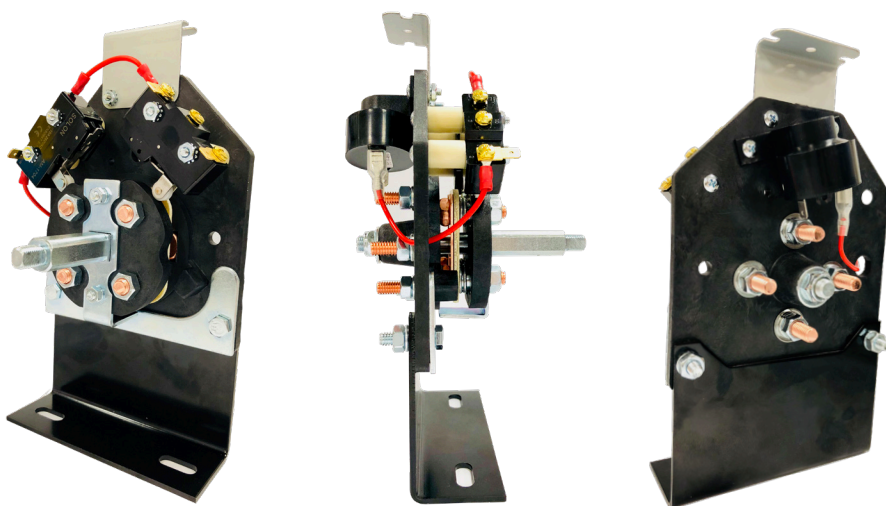

We recommend professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product.

Always wear appropriate eye protection

INSTALLATION INSTRUCTIONS

STEP 1

To begin, be sure to engage the parking brake and switch your cart to "off".

STEP 2

Remove seat bottom and disconnect the black negative cable from battery terminal.

STEP 3

Using a 3/8" socket, remove and retain FNR switch cover.

STEP 4

Locate the shift lever connected to the FNR Switch and disconnect it with a 9/16" wrench.

STEP 5

Using 1/2" socket and wrench remove mounting hardware.

STEP 6

Locate the reverse buzzer and unplug the black wire.

STEP 7

Locate the four black cables on the back of the FNR switch. Remove hardware holding cables with a 1/2" ratchet.

NOTE: It is important that the cables connect to the exact same location on your new FNR Switch. You may want to take a picture or label where each cable was connected.

STEP 8

Turn the FNR Switch over and disconnect the last set of wires from the switches.

STEP 9

Remove bolts, washer and lock nut to remove FNR switch assembly from cart.

STEP 10

To install follow the instructions in reverse order of removal. When your new FNR switch is secure, reconnect the battery wire and install seat bottom back on the cart.

NOTE: When reconnecting the shift lever to FNR switch, be sure to tighten the 9/16" nut till it is firm and secure.

INSTALLATION COMPLETE

IMPORTANT

To prevent overheating from extra accessory installation, we have provided hardware that can be utilized on top of existing hardware.

