


Jake's Lift Kits

Club Car Precedent Bump Steer Kit

Fits Lifted Carts w/ Jake's Old Style Spindles & Non Lifted Carts

Part# 7277

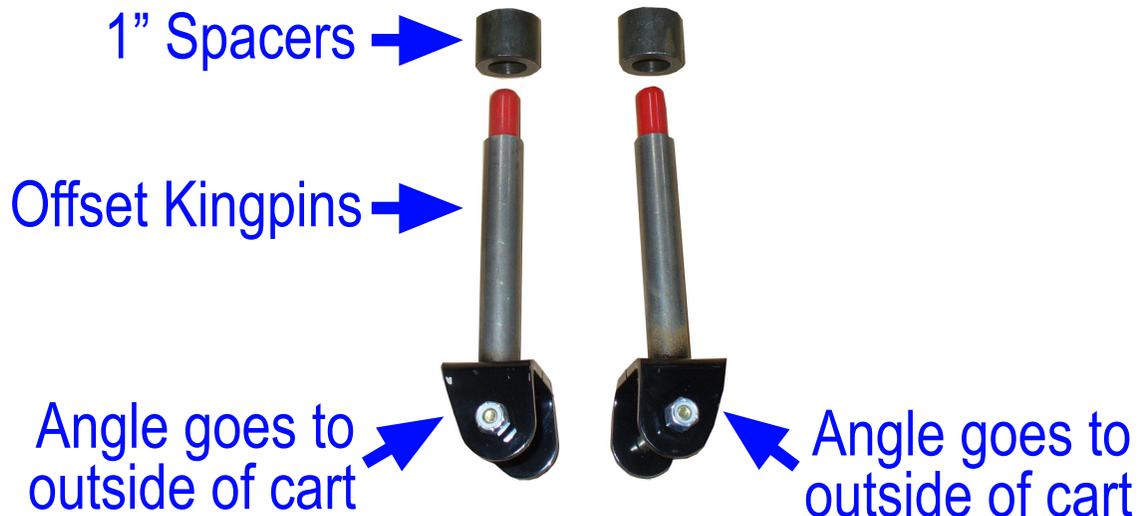

Installation Instructions:

1. Jack up the cart and place the cart on jack stands.
2. Remove the front wheels/tires.
3. Remove the front hubs and spindles from the cart and discard the stock kingpins (save the stock nuts).
4. Re-install the front spindles using Jake's new offset kingpins.
NOTE-Install the kingpins with the new leaf spring mount on the bottom of the spindles with the angle towards the outside of the cart and the straight edge towards the center of the cart. The 1" spacers go on top of the spindles. Use the stock nuts and securely tighten.
5. Re-install hubs, wheels/tires, secure all nuts and bolts and grease spindles.