




WINDSHIELD INSTALLATION INSTRUCTIONS

ITEMS INCLUDED


- Windshield
- Hardware Kit
- Strut Clips
- Channels*

TOOLS NEEDED

- 10mm wrench
 - **Phillips Head or Torx Bit
- **Hardware may be vary between OEMs.
Check bolt head pattern to confirm tools needed.*

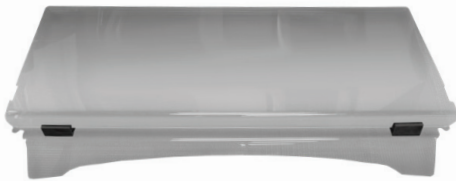

Windshield

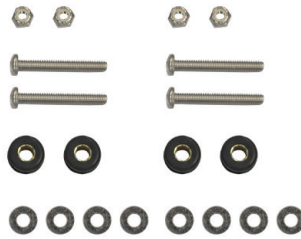

Hardware



Strut Clips




Channels*

**In some cases, Channels may be used instead of bolts.*

It's recommended to leave protective film on the windshield during the installation process to prevent scratching.

STEP 1

Insert the provided rubber bushings into each of the mounting holes on the windshield. If your windshield does not have pre-drilled holes, it will rest on the installed hardware.

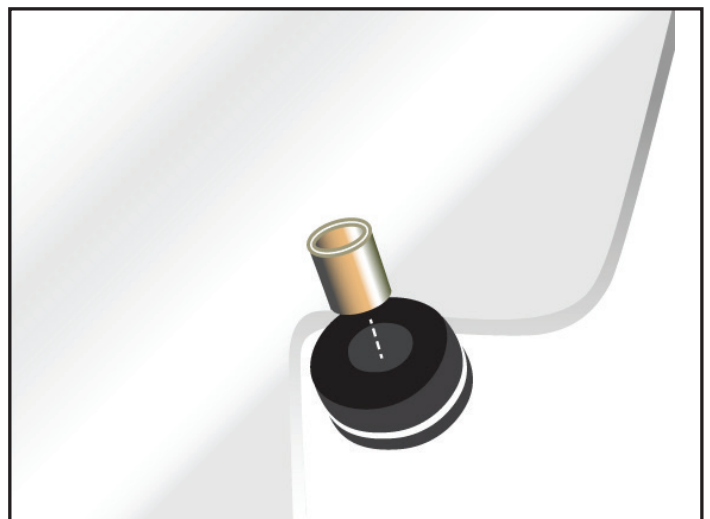


Note: Insert the rubber bushing first, followed by the sleeve.

Note: Depending on your OEM, mounting may vary. Channels may be included in your kit to replace the need for multiple bolts and mounting holes.

STEP 2 If your kit doesn't include channels, proceed to Step 3.


If your kit includes channels, attach to the windshield as shown. The thin opening of the channel goes on the windshield. Once the channels are attached to the windshield, clip the windshield to the struts.

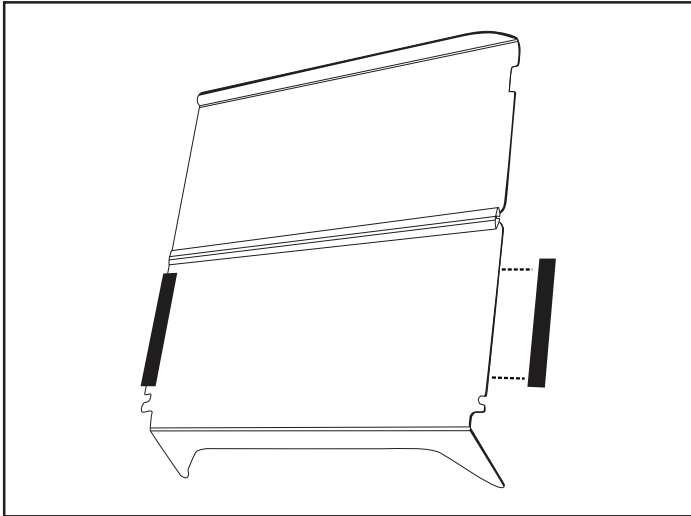

STEP 3



Align windshield mounting holes with the bushings and sleeves, and secure the windshield using the included bolts, spacers, and nuts. Insert the bolt with washer through the front side of the windshield, and secure with a washer and nut on the other side of the strut as shown in the diagram below. Tighten until snug.

Note: If your windshield does not have pre-drilled holes, it will rest on the grommet.

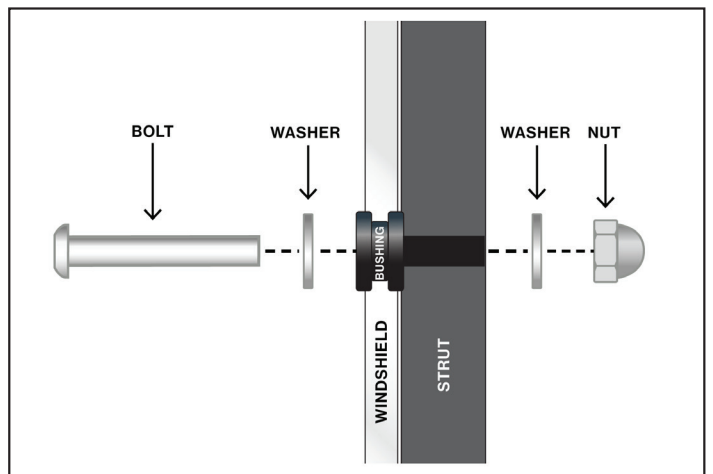

STEP 4

Install the clips onto each of the struts and slide them into position. To fold up the windshield, pull open the rubber clip and fit the edge of the windshield into the slot.

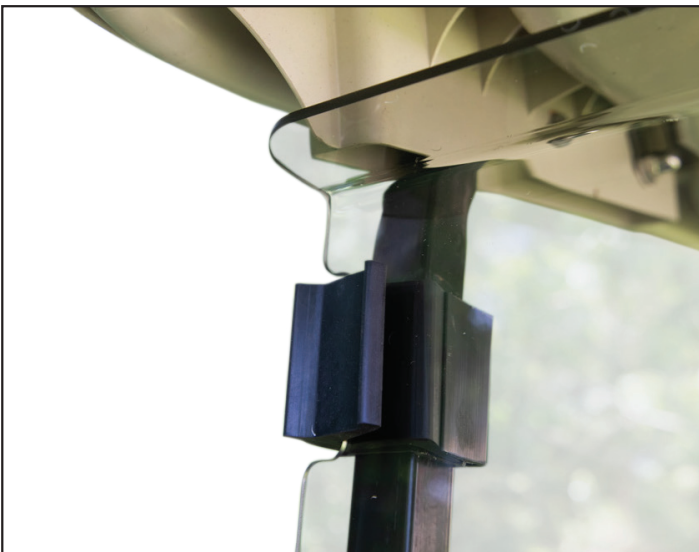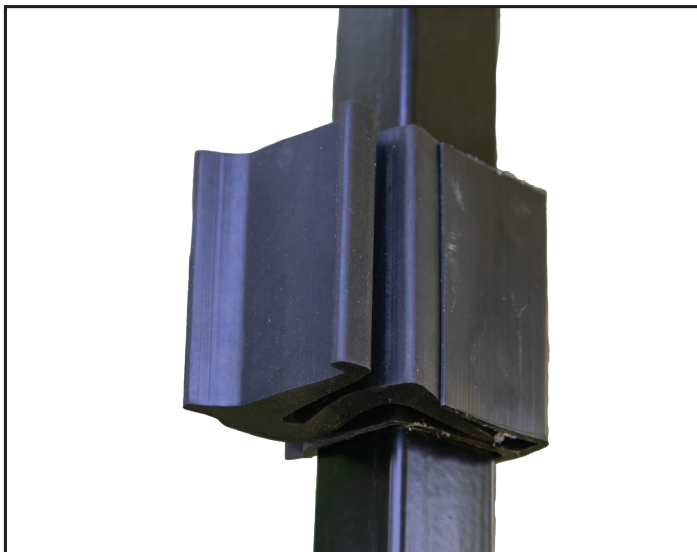

STEP 5

Apply the self-adhesive clear windshield bumpers to the struts wherever needed. We recommend placing them just above the fold of the windshield. After the windshield is fully installed, remove any protective plastic film.



INSTALLATION COMPLETE



Scan QR code to
shop our Amazon
Storefront.